Important information on how to change a Freka® Click Adapter, ENFit

Changing of the Freka® Click Adapter





To remove the Click Adapter squeeze the contoured surfaces of the Click Adapter firmly between two fingers



Pull out the intestinal tube carefully for approx. 3 - 4 cm



To prevent the intestinal tube from slipping, close the tube clamp for fixation.



Cut off the Click Adapter

Fixation of the intestinal tube to the gastric tube



Push the new Click Adapter (green/ white) with its white end first over the intestinal tube.



Metal pin of the Freka Connector, ENFit (green) and the external end of the intestinal tube must be free of grease, clean and dry. MCT Oil on the metal pin increases the risk of detaching of the intestinal tube.



Push the metal pin of the Freka Connector, ENFit up to its base into the intestinal tube.



Freka Connector, ENFit and the Click Adapter only the bottom part (green/white) shall be rotated to prevent twisting of the

For fixation of the



Screw the Click Adapter (green/white) tight onto the Freka Connector, ENFit. Make sure to screw the Click Adapter until no rotation is possible.



Open the tube clamp of the gastric tube and push the connected Click Adapter over the (green) intestinal access of the Freka Y-Connector, ENFit marked with an "i". The fixation must be clearly audible with a "Click"! Close the intestinal tube with the cap of the Freka Connector, ENFit.



Adapter, cannot be used again, once the connection was detached. A proper connection cannot be generated again. A new Click Adapter must be used.



intestinal tube.

the ENFit connector it is necessary to tighten the connection by one quarter turn only. When disconnecting a giving set from the ENFit connector of the intestinale tube, grip the connector above the strap of the cap and make sure to turn the giving set connector **only** and not the tube connector.

When connecting the giving set to



